



Warning: Failure to follow safety instructions may cause fixture to fall resulting in personal injury and/or property damage.

1. Do not exceed maximum static load as noted below. Installation considerations must be given to severe dynamic loading conditions such as vibration and high winds when installing these fixture hangers.

Ball Type Cat. Series	Maximum Static Load (lbs.)	CSA Max. Pendant Load (lbs.)**	Cushion Type Cat. Series	Maximum Static Load (lbs.)*	CSA Max. Pendant Load (lbs.)**	Hub Type Cat. Series	Maximum Static Load (lbs.)	CSA Max. Pendant Load (lbs.)**
JBK	250	(180)	AHG	40		CPU	250	
			EFHU-12	12		EFHC	350	
			EFHU-48	48		EFHM-EFHF	200	(90)
			EFHU-120	120		ESD	350	
			JBK	40	(180)	FHHM-FHHF	200	(75)
			UNJ	30	(24)	FHLM-FHLF	350	(166)
						FHS5075	350	(166)
						FHSN	150	
						JBK	250	

2. Make certain that all cover screws, setscrews (if provided), junction box screws, and stem threads are securely tightened in place.

* Maximum static load for cushion type before spring is fully compressed.

** CSA Maximum pendant load (lbs.).