ACCUGAF[™] Filter Bag Range



Filter bags for applications demanding efficiencies greater than 99%

Eaton's ACCUGAF filter bags are suitable for a wide range of applications such as beer, wine, spirits and beverage filtration, fine particle removal in parts cleaning, activated carbon removal in process systems, the final filtration of vinegar, varnishes and of hydraulic oils and lubricants and many more. With efficiencies greater than 99%, each ACCUGAF filter bag model provides cost-effective filtration solutions for demanding applications. The five models ensure that users can efficiently remove particles ranging from $1-25 \,\mu$ m while delivering a long service life.

Features and Benefits

- ACCUGAF polypropylene filter bags are fabricated from hydrophobic microfiber filter material, which require pre-wetting with an aqueous solution (full details about wetting and installation are provided with every box of ACCUGAF filter bags)
- Highly efficient melt-blown filter material in polypropylene or polyester with graded density profiles to maximize dirt-holding capacity and prolong service life
- No additives such as resins, binders or surface treatments



- Double downstream cover layer virtually eliminates fiber migration
- Unique UNI-WELD process for bottom seam provides a stronger, more flexible weld seal
- Fully-welded construction with patented SENTINEL[®] seal ring provides 100% bypass-free filtration
- The pressure-activated SENTINEL seal ring provides a flexible, chemically resistant seal which adapts to any bag filter housing
- Eaton strongly recommends the use of an insertion tool that facilitates the insertion of the filter bag into the bag filter housing and ensures the correct alignment of the filter bag inside the restrainer basket

Filter Specifications

Materials Melt-blown polypropylene or polyester

Cover layers Polypropylene or polyester mesh

Seal rings Welded polypropylene or polyester SENTINEL seal ring

Retention ratings¹ 1.5, 3, 5, 10, 25 μm @ > 99% efficiency

Dimensions/Parameters

Sizes 01: Ø 7 x 17" L (180 x 435 mm) 02: Ø 7 x 32" L (180 x 810 mm)

Filter area 01: 2.6 ft² (0.24 m²) 02: 5.2 ft² (0.48 m²)

Max. operating temperatures Polypropylene: 194 °F (90 °C) Polyester: 302 °F (150 °C)

Max. differential pressure 36 psi (2.5 bar)

Recommended change-out pressure for disposal²

<u>11.6 – 21.7 psi (0.8 – 1.5 bar)</u>


Max. flow rates³ 01: 35 GPM (8 m³/h) 02: 66 GPM (15 m³/h)

FDA/EC Conformity

All polypropylene materials used in manufacturing comply with the regulations of the Food and Drug Administration (FDA), title 21 of the Code of Federal Regulations Section 177, and EC Regulations 1935/2004 and EC Directive 2002/72/EC, as applicable for food and beverage contact.

ACCUGAF AGFE filter bag models are NOT compliant with the above mentioned EC Regulations and Directives.

ACCUGAF Filter Bag Range

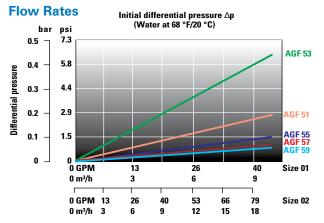


Filter Removal Efficiency

Materials	Models	Particle sizes (μm) at common removal efficiencies (%)					∆p psi (bar) size 02	Max. operating temperatures
		> 60%	> 90%	> 95%	> 99%	> 99.9%	@ 44 GPM (10 m ³ /h)	°F (°C)
Polypropylene	AGF 51	0.2	0.6	0.8	1.5	5	1.3 (0.09)	194 (90)
	AGF 53	0.8	1	2	3	5	3.2 (0.22)	194 (90)
	AGF 55	1	2	3	5	15	0.7 (0.05)	194 (90)
	AGF 57	2	4	5	10	25	0.6 (0.04)	194 (90)
	AGF 59	10	20	22	25	35	0.4 (0.03)	194 (90)
Polyester	AGFE 51	0.2	0.6	0.8	1.5	5	1.3 (0.09)	302 (150)
	AGFE 55	1	2	3	5	15	0.7 (0.05)	302 (150)
	AGFE 57	2	4	5	10	25	0.6 (0.04)	302 (150)

Ordering Information

Powering Business Worldwide

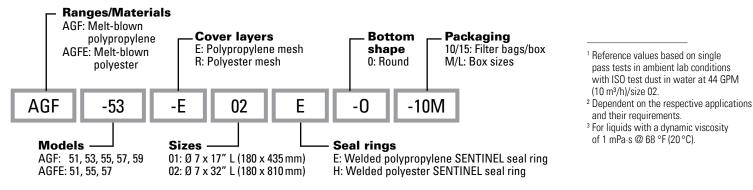

North America 44 Apple Street Tinton Falls, NJ 07724 Toll Free: 800 656-3344 (North America only) Tel: +1 732 212-4700

Europe/Africa/Middle East

Auf der Heide 2 53947 Nettersheim, Germany Tel: +49 2486 809-0

Friedensstraße 41 68804 Altlußheim, Germany Tel: +49 6205 2094-0

An den Nahewiesen 24 55450 Langenlonsheim, Germany Tel: +49 6704 204-0 China No. 3, Lane 280, Linhong Road Changning District, 200335 Shanghai, P.R. China Tel: +86 21 5200-0099

Singapore

4 Loyang Lane #04-01/02 Singapore 508914 Tel: +65 6825-1668

Brazi

Av. Julia Gaioli, 474 – Bonsucesso 07251-500 – Guarulhos, Brazil Tel: +55 11 2465-8822

For more information, please email us at *filtration@eaton.com* or visit www.eaton.com/filtration

© 2016 Eaton. All rights reserved. All trademarks and registered trademarks are the property of their respective owners. All information and recommendations appearing in this brochure concerning the use of products described herein are based on tests believed to be reliable. However, it is the user's responsibility to determine the suitability for his own use of such products. Since the actual use by others is beyond our control, no guarantee, expressed or implied, is made by Eaton as to the effects of such use or the results to be obtained. Eaton assumes no liability arising out of the use by others of such products. Nor is the information herein to be construed as absolutely complete, since additional information may be necessary or desirable when particular or exceptional conditions or circumstances exist or because of applicable laws or government regulations.



