

Membrane Filtration
BECO® MEMBRAN PS Aqua

Membrane Filter Cartridges

BECO MEMBRAN PS Aqua filter cartridges are designed for reliable removal of spoilage microorganisms and meet extended service life requirements of water final filtration in food and beverage applications.

Eaton can suggest the most economical configuration of pre and final filter.

Features and Benefits

- The high filter area and asymmetric membrane structure of polyethersulfone offers exceptionally high flow rates and outstanding service life
- The special design allows for 72.5 psi (5 bar) differential pressure in the direction of flow and 29 psi (2 bar) differential pressure in reverse to support a long service life
- The high thermal stability allows for more than 100 steam sterilization cycles
- Wide broad chemical compatibility from pH 1 - 14

Configuration

BECO MEMBRAN PS Aqua filter cartridges are made of high-quality polyethersulfone membranes. Polypropylene support fleeces protect the membrane and provides wide chemical compatibility, while the polypropylene cage and core help to ensure maximum mechanical stability.



Materials

Filter membrane:	Polyethersulfone
Support fleeces:	Polypropylene
Cage, core	Polypropylene
End cap/adaptor:	Polypropylene, adapter with reinforcing ring
O-rings:	Silicone (standard)

The plastic components meet the requirements of Directive 10/2011/EC and amendments. All materials used meet the FDA requirements according to 21 CFR.


Technical Data

Nominal length	Filter area
20" (500 mm)	16.1 ft ² (1.50 m ²)
30" (750 mm)	24.2 ft ² (2.25 m ²)
40" (1,000 mm)	32.3 ft ² (3.00 m ²)

Diameter:	2.75 in (70 mm)
Maximum operating temperature:	176 °F (80 °C)
Maximum differential pressure in flow direction:	72.5 psid at 68 °F (500 kPa, 5.0 bar at 20 °C) 29 psid at 176 °F (200 kPa, 2.0 bar at 80 °C) 4 psid at 250 °F (30 kPa, 0.3 bar at 121 °C)
Maximum differential pressure against flow direction:	29 psid at 68 °F (200 kPa, 2.0 bar at 20 °C)
Hot water sanitization:	Max. 194 °F (90 °C), 30 minutes
Steam sterilization:	Max. 250 °F (121 °C) 100 cycles at 221 °F (105 °C) for 30 minutes

Flow Rate

30" with water at 68 °F (20 °C) (standard values)

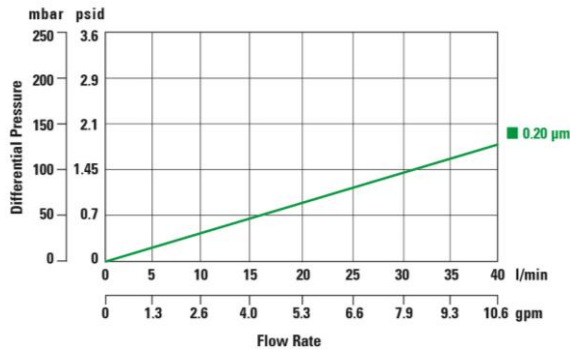

Integrity Test

Types	Test pressure psig	Test pressure (bar)	Max. diffusion rate per 10" element
PSA02	36	(2.5)	<= 20 ml/min

The operation manual supplied with the device describes the procedure for the integrity test.

Titer Reduction

Pore size	Test organism	Titer reduction/cm ² (LRV)
PSA02 (0.20 µm)	<i>Brevundimonas diminuta</i>	> 10 ⁷ (LRV > 7)

Adapter Codes

Code 2	Code 7
Single open end (SOE) 2-222 O-ring triple bayonet adapter with spear	Single open end (SOE) 2-226 O-ring double bayonet adapter with spear



Ordering Information

BECO MEMBRAN PS Aqua filter cartridges with protective foil in carton.

Type	Retention rating	Adapter	Nominal length	Gasket
PSA	02 = 0.20 µm	2 = Code 2*	2 = 20" (500 mm)	S = Silicone
		7 = Code 7	3 = 30" (750 mm)	
			4 = 40" (1,000 mm)	

* Code 2 can be used instead of Code 5 (2-222 O-ring with spear)

Example

PSA	02	7	3	S
-----	----	---	---	---

BECO MEMBRAN PS Aqua filter cartridges; 0.2 µm retention rating; Code 7, 30" (750 mm); silicone gasket

Sterilization

Steam Sterilization

With steam at 230 °F (110 °C)/7.25 psig (50 kPa, 0.5 bar).

Duration: 30 minutes after steam emerges from all openings of the filtration system.

Hot Water Sanitization

Using water up to 194 °F (90 °C) max.

Duration: at least 30 minutes once the temperature reaches 185 °F (85 °C) from all openings of the filtration system. Soften and filter (ca. 1 µm) the water to avoid lime precipitation that could lead to premature clogging of the filter cartridge.

Safety

When used as directed and handled correctly, there are no known unfavorable effects associated with this product. BECO MEMBRAN PS Aqua filter cartridges do not require the provision of safety-relevant information.

Storage, handling and transport does not present any environmental and health risks.

Disposal

BECO MEMBRAN PS Aqua filter cartridges should be treated as industrial waste. Any local and other official regulations in relation to the filtered product must be followed.

Storage

Store cartridges in their original packaging and in a dry, odor-free and UV ray protected place.

Use filter cartridges within 60 months after production date.

Certified Quality

During the production process, BECO MEMBRAN PS Aqua filter cartridges are regularly monitored to ensure consistent excellent quality control and are tested for 100% integrity as a part of the manufacturing process.

North America
44 Apple Street
Tinton Falls, NJ 07724
Toll Free: 800 656-3344
(North America only)
Tel: +1 732 212-4700

Europe/Africa/Middle East
Auf der Heide 2
53947 Nettersheim, Germany
Tel: +49 2486 809-0

Friedensstraße 41
68804 Altlußheim, Germany
Tel: +49 6205 2094-0

An den Nahewiesen 24
55450 Langenlonsheim, Germany
Tel: +49 6704 204-0

China
No. 3, Lane 280,
Linhong Road
Changning District, 200335
Shanghai, P.R. China
Tel: +86 21 5200-0099

Singapore
4 Loyang Lane #04-01/02
Singapore 508914
Tel: +65 6825-1668

Brazil
Rua Clark, 2061 - Macuco
13279-400 - Valinhos, Brazil
Tel: +55 11 3616-8400

**For more information, please
email us at filtration@eaton.com
or visit www.eaton.com/filtration**

EN
1A 4.3.5.4
12-2016

© 2016 Eaton. All rights reserved. All trademarks and registered trademarks are the property of their respective owners. All information and recommendations appearing in this brochure concerning the use of products described herein are based on tests believed to be reliable. However, it is the user's responsibility to determine the suitability for his own use of such products. Since the actual use by others is beyond our control, no guarantee, expressed or implied, is made by Eaton as to the effects of such use or the results to be obtained. Eaton assumes no liability arising out of the use by others of such products. Nor is the information herein to be construed as absolutely complete, since additional information may be necessary or desirable when particular or exceptional conditions or circumstances exist or because of applicable laws or government regulations.