
CLOGGING INDICATOR

Series AE (electrical / visual-electrical, block execution)

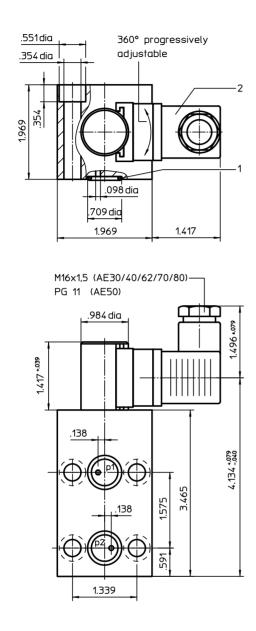

1. Clogging indicator AE

1.1. Type index: (ordering example)

AE. 30. 1,5. P B 1 2 3 4 5 6 7	
<u>AE</u> = clogging indicator, electrical / visual-electrical	
2 version: 30-80 = see table below	
3 indicator-pressure difference: ∆p-nomina 1,5 = 22 PSI 2,5 = 36 PSI 5,0 = 73 PSI	l
4 sealing material: P = Nitrile (NBR) V = Viton (FPM)	
5 material: (block) - = standard VA = stainless steel	
6 execution: B = block execution	
7 damper: - = standard with hydraulic damper 1 = without hydraulic damper	

2. Technical data:

temperature ranges
- operating temperature:

resistant to compression:
 survival temperature:
 max. operating pressure:
 max. pressure difference:

+ 14°F to +176° F (for a short time +212°F) -22°F to +212°F -40°F to +212°F 6000 PSI 2320 PSI

version	luminous	contact	voltage	max. rupturing capacity	max. switching current	connection
	indication			(resistive load)	(resistive load)	protection
30	-		175V DC	3 VA	0,25 A	
			125V AC	3 Watt	0,25 A	
40	-	contact maker	175V DC	20 VA	1,0 A	line adapter according to
		and contact breaker	230V AC	10 Watt	0,5 A	DIN 43650-designA/ISO4400
50	1x LED 1)		120V AC/DC	3 Watt/VA	0,025 A with 120V AC/DC	
62	1x LED		110230V AC/DC	20 Watt/VA	0,180 A with 110V AC/DC	IP 65 according to
					0,090 A with 230V AC/DC	DIN EN 60529
70	2x LED		24V DC	3 VA	0,080 A with 24V DC	
80	2x LED		24V DC	20 VA	0,750 A with 24V DC	

¹⁾ LED = light emitting diode

EDV 08/12


Changes of measures and design are subject to alteration!

	Friedensstrasse 41, 68804 Altlussheim, Germany			
Powering Business Worldwide	phone	+49 (0)6205 2094-0	e-mail	info-internormen@eaton.com
	fax	+49 (0)6205 2094-40	url	www.eaton.com/filtration

3. Spare parts:

item	qty.	designation	dimension	article-no.	type
1	2	O-ring	14 x 2	304342 (NBR)	versions 30 - 80
				304722 (FPM)	
2	1	line adapter		312492	versions 30 and 40
	1	line adapter		315012	versions 70 and 80
		with LED 24V			
	1	line adapter	DIN 43650-designA/ISO4400	315010	version 50
		with LED 120V			
	1	line adapter		332235	version 62
		with LED 110230V			

4. Symbols:

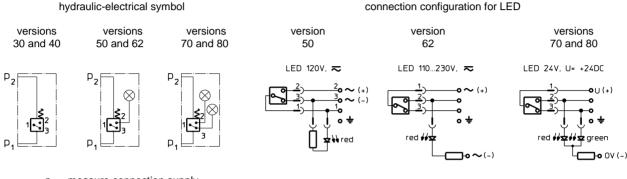

 p_1 = measure connection supply

 p_2 = measure connection output

5. Description:

The AE 30 and AE 40 pollution indicators are electrical differential pressure indicators.

The AE 50 to AE 80 pollution indicators are combined optical and electrical differential pressure indicators. These differential pressure indicators can be fitted to all pressure filters $p \le 6000$ PSI for which there is a corresponding assignment on the relevant dimension drawing. As the degree of pollution of the filter element rises, so the difference between the entry pressure p_1 and the exit pressure p_2 of the filter increases. Depending on this pressure difference and irrespective of the operating pressure, in the pollution indicators

- AE 30 and AE 40, two electrical signals (contact maker/contact breaker) are triggered
- AE 50 and AE 62, two electrical signals (contact maker/contact breaker) are triggered and one optical signal is formed

- AE 70 and AE 80, two electrical signals (contact maker/contact breaker) are triggered and two optical signals are formed.

A metering piston subjected to the entry and exit pressure moves against a metering spring according to the pressure differential. Depending on the path, a permanent magnet integrated in the metering piston activates a reed contact (electromagnetic switch) and triggers the electrical signal. The electrical and optical indication is effected as a digital signal at the given switching pressure. Versions 50 to 80 of the pollution indicator are fitted with additional LED displays. The optical LED signal becomes visible according to the selected version in the translucent cover plate of the line box on the pollution indicator. In the pollution indicators

- AE 50 and AE 62, the red LED signals that the filter element needs to be changed

- AE 70 and AE 80, the green LED signals the normal operating state (filter element not yet polluted to an unacceptable level), while the red LED signals that the filter element needs to be changed.

6. Operating instructions:

Normally filters are supplied with mounted clogging indicators. It is necessary to make sure the availability and the right positioning of sealing parts O-ring 14 x 2 as well as a dirt-free mounting. The electrical contacts are to be connected according to the graphical symbol shown on the type plate of the clogging indicator.

7. Maintenance:

The device is maintenance-free, however, note that no cleaning fluids and solvents get on the transparent cap of the optical indicator.